

Using the AV System


Use the audiovisual system in this classroom to display using the **HDMI** cable with your laptop or wireless connection by **AirMedia**.

The AV Touch Panel can be used to select your source / table sources and choose where to send them.

The Source Selection Bar, located at the bottom of the AV touch panel contains all connections available. When a table source is connected by **HDMI** it will populate with a source icon for each table in use (Table1, Table2, etc..)

When finished press the **System Shutdown** button to power off the AV system.

Advanced Routing Feature

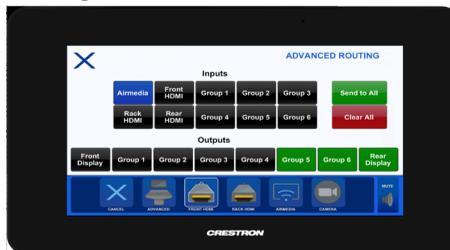

Use the Advanced Routing menu to select an input and display to multiple outputs. (Input -> Output)

Use the "Cancel" button to reset the displays back to their original HDMI table.

Use the "Send All" for image to appear on all displays

Use the "Clear All" to turn off all displayed images

Display Options



Users can Long-Press a source and the following display modes will be selectable.

All Displays - All 8 flat panel displays

Main + Rear - Front flat panel and rear flat panel only

Main Display - Front flat panel only

Confidence Only - Rear flat panel only

Camera Modes and Angles

For camera and microphone connection you must use the **USB** cable located in / on the AV cabinet.

Use the following selections within your application:

Camera - **AVERCAM** (Rear and Front mounted)

Microphone - **Echo Canceling Speaker Phone (HDL300)**

Speakers - **Crestron (Intel(R)) Displayport Audio**



Use the Camera Source Icon to access the control menu:

Camera Select: Rear Mounted or Front Mounted

Rear Camera Modes: Wide, Center, or Tight

Presets: 1-4 corresponding to table group areas (back left, front left, back right, and front right corners)

Camera Zoom: In or Out

Note: Cameras do not auto-track